

Important- Read First! – The Bluetooth Master Remote will automatically control the PRISM light fixtures right out of the box. If you decide to download the ControLit App, after login and when you pair your PRISM fixtures with your ControLIT account, the Master Remote will no-longer work until you pair the Master Remote with with the paired fixtures. To sync the remote with the PRISM fixtures paired to your account, you must also pair the Master Remote with your ControLIT account. To pair Master Remote, follow instructions in app when you select "find fixtures" and then select "remote" instead of "fixture" and then follow the steps outlined in the app.

Bluetooth Master Remote Specifications:


- Dimensions: 110*52*22mm (L x W x T)
- Power Source: 2 AAA cell batteries (1.5V x 2)
- Control Distance: 65 ft radius (unobstructed)
- Maximum Control Device: Depends on the lighting layout. PRISM fixtures feature a Bluetooth Mesh network, meaning fixtures speak to each other. Fixtures must be within 60ft of another fixture to be considered within range of each other. If fixtures are within range limits and there are no obstructions, there is no limit to the number of fixtures that can be controlled via a single remote or through the app.
- Control Criteria: Dimming 5% 100%, CCT adjustment 2700K-4000K, RGB.

Bluetooth Master Remote Functionality Description:

Every time a button is pressed the LED located in the center will flash once to indicate a command

has been sent. If LED did not flash when a button is pressed, it will be time to change the battery.

The remote and wall switch will remember the last setting. (Remember give a little time for the cloud to remember the setting, 5-15 seconds.)

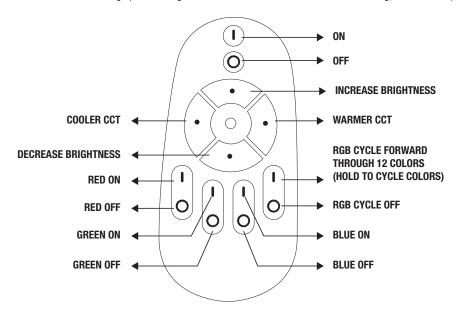

RED, GREEN AND BLUE BUTTONS CAN BE DIMMED

Operation:

- · Keep Master remote in easy to locate place.
- . Master remote includes holster for storing remote on wall.
- Pushing the top "I" button will turn on lights on to the last setting used.
- Master remote will control all Prisms in range or all the Prisms that have been paired with the remote.
- Use CCT buttons to change kelvin temperature.
- Use dim buttons to raise and lower brightness of all.
- Pressing the R, G, B, buttons will turn on respective color. (hold or tap to dim color)
- Pressing and holding the RGB button will cycle through 12 colors other than RED, Green or Blue.
- Press top "0" button to shut off all the lights.
- . Should you enter the room and cannot find the remote, rocking the connected light switch will turn lights on to last setting.

Precautions:

- . Please use only AAA cell batteries for the Bluetooth remote, if remote will not be used for a long time please remove the batteries to prevent leaking.
- •If remote is not responsive, please check if battery is low and replace batteries.

Trouble Shooting:

Master Remote does not respond.

- a. Check batteries.
- b. Is there power to the fixtures?
- c. Is the light switch for the fixtures in the on position?
- d. If fixtures are on a dimmer, dimmer should be set at full brightness.
- e. Did you pair the remote after downloading the app?