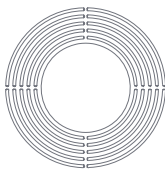
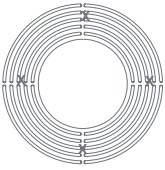
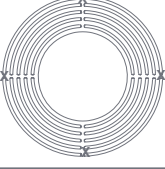


NEW CONSTRUCTION PLATE INSTALLATION GUIDE – WARNING

WARNING – Read all product labels and instructions before installing fixture.

WARNING – Wear safety gloves and other appropriate safety equipment.

DOWNLIGHT COMPATIBILITY & CIRCULAR KNOCKOUT (CKO) SIZING

Compatible Products	Circular Knockout (CKO) Instructions
THINFIT 4" 8.5DLNC4DIM/xxx 10NCDLR4DIM/9XX/EXT INNOFIT 4" 14CDLA6/xxx/277V SPECFIT 4" AD4LEWXXXXDIM010UNVYYAD4RZZ	 Keep all CKOs
THINFIT 6" 11.6DLNC6DIM/xxx 12NCDLR6DIM/9XX/EXT INNOFIT 6" 21CDLA6/xxx/277V SPECFIT 6" AD6LEWXXXXDIM010UNVYYAD6RZZ	 Remove CKOs #1, #2 & #3
INNOFIT 8" 27CDLA8/xxx/277V SPECFIT 8" AD8LEWXXXXDIM010UNVYYAD8RZZ	 Remove all CKOs

Where W means S (Small), M (Medium) or L (Large) which indicates the size of the light engine. XXXX or XXX means 8018-9750 or 818-965, which indicates CRI and Color Temperature. YY means MD (Medium), VN (Very Narrow), NR (Narrow), WD (Wide), which indicates the beam angle. ZZ means CC (Clear Diffuse, Clear Diffuse), CW (Clear Diffuse, White), WH (White), BL (Black), which indicates the Reflector and Flange finish.

NEW CONSTRUCTION PLATE DRYWALL INSTALLATION

- Using cutting pliers, remove any CKO sections necessary to install the downlight. (fig. 1)
- Nail or screw the NCPLATE to the ceiling's studs/joists. Note NCPLATE allows a maximum spacing of 24". (fig. 2)
- Make appropriate electrical connection if required.
- Follow appropriate downlight installation instruction to complete the installation. (fig. 3 & 4)

fig. 1

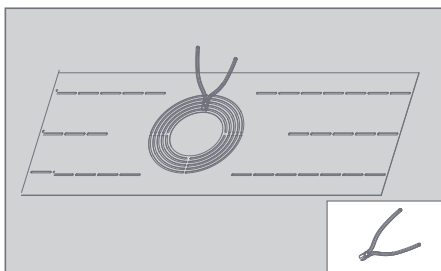


fig. 2

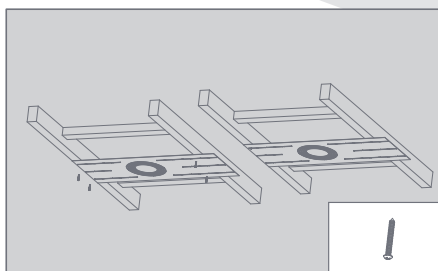


fig. 3


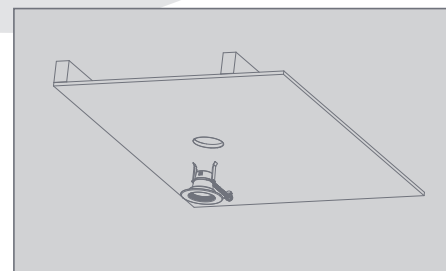


fig. 4

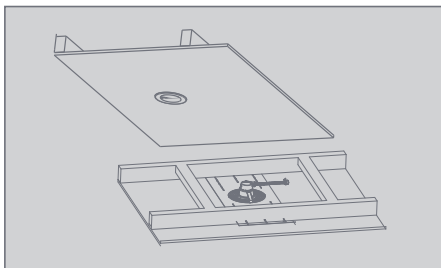

NEW CONSTRUCTION PLATE T-GRID INSTALLATION

1. Using cutting pliers, remove any CKO sections necessary to install the downlight. (fig. 1)
2. Place the NCPLATE/T on top of the T-Grid tile where the downlight will be installed. Screw the NCPLATE/T to the sides of the T-Grid through the plate's flange holes. (fig. 2)
3. Once the plate is attached to the T-Grid, cut a hole in the tile following the inside of the selected CKO. (fig. 3)
4. Follow appropriate downlight installation instruction to complete the installation. (fig. 4 & 5)

fig. 1

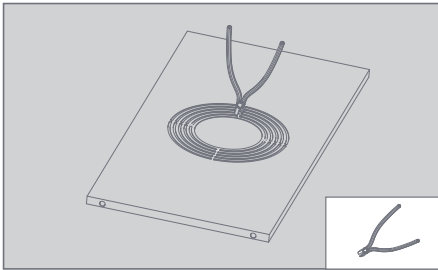


fig. 2

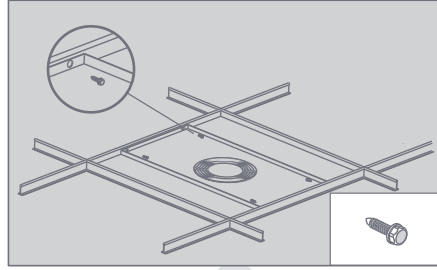


fig. 3

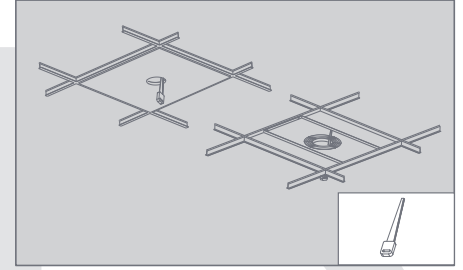


fig. 4

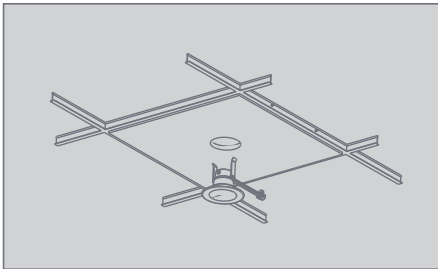


fig. 5

